

How to install the spare part set for BRFT001-B and BMFT001-B

These spare parts are used for the maintenance of the water guns.

This spare part set contains:

- 1 pc. Stainless steel pen with 2 O-rings, washer and nozzle pin.
- 1 pc. Stainless steel spring.
- 1 pc. Hex nut with O-ring.

Disassembly/assembly:

1. Lift the top cover on both sides (A). (picture 1)
2. Remove the safety locking clip. (B) (picture 2)
3. Unscrew and remove the hex nut (C) (Size24). (picture 3)
4. Remove the spring and nozzle pen (picture 4)
5. Clean the inside of the water gun.
6. Put grease on the nozzle pen with the 2 O-rings. (picture 5)
7. Put in the new spring and axle.
8. Mount the hex nut. (B)
9. Replace the safety locking clip. (picture 6)
10. Put the top cover back on both sides.



To prevent the seals from drying out, we recommend regularly cleaning and greasing the gun with the suitable grease.

We advise to use Chesterton 629 High Temperature White Grease for Viton seals and Cassida Grease MD2 for EPDM seals.