

How to install a spare part set for water gun

These spare parts are used for the maintenance of the water guns.



This spare part set contains:

- 1 pc. Stainless steel pen with 2 O-rings, washer and nozzle pin.
- 1 pc. Stainless steel spring.
- 1 pc. Hexnut with O-ring

Spare parts are available for the brass, chromed-brass, stainless steel and plastic AKBO cleaning guns.


Disassembly/assembly:

- 1. Remove the top cover (A). (picture 1)
- 2. Hold back the trigger handle. (picture 2)
- 3. Unscrew and remove the hexnut (B) (Size32). (picture 3)
- 4. Unscrew the adjustable screw(C). (use screwdriver) (picture 4)
- 5. Remove the spring and nozzle pen. (picture 5)
- 6. Clean the inside of the water gun.
- 7. Put grease on the nozzle pen with the 2 O-rings. (picture 6)
- 8. Put in the new spring and axle.
- 9. Mount the axle with the adjustable screw. (C)
- 10. Pull in the axle with the trigger handle. (D)
- 11. Mount the hex nut. (B)
- 12. Put on the cleaned top cover.

To prevent the seals from drying out, we recommend regularly cleaning and greasing the gun with the recommended grease.

We advise to use Chesterton 629 High Temperature White Grease for VITON seals.

For EPDM seals, in brass cleaning guns, Cassida Grease MD2.

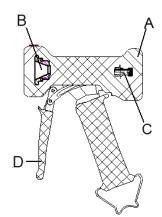









4.



5.



